


Inspection

1. Turn the ignition switch OFF.
2. Disconnect the PCSV connector.
3. Measure resistance between the PCSV terminals 1 and 2.
4. Check that the resistance is within the specification.

Specification:Refer to "**Specification**"

Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the purge control solenoid valve connector (A).
3. Disconnect the vapor hoses (B) from the purge control solenoid valve.
4. Remove the valve from the bracket (C) in the direction of the arrow.

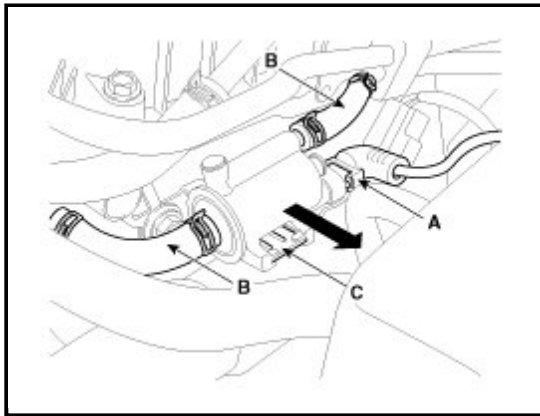

Installation

CAUTION:

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

CAUTION:

- Use care to keep foreign material out of the valve.

1. Install in the reverse order of removal.

Purge control solenoid valve bracket installation bolt:9.8 - 11.8 N.m (1.0 - 1.2 kgf.m, 7.2 - 8.7 lb-ft)

© 2018 ALldata, LLC. All Rights Reserved. (Version 2.0.13872)